


CONCRETE SCREW ECS-0 WITH EYE HOOK

Mounting


ESSVE
GET IT DONE



1. Drill a hole. Roughly clean the drill hole from drill cuttings by moving the hammer drill back and forth 2-3 times.

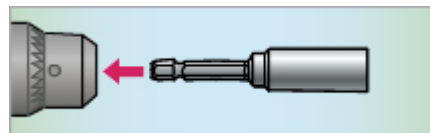

2. Insert the installation tool in the impact wrench.

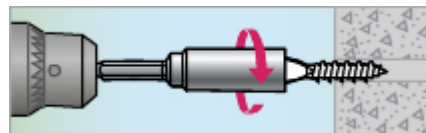

3. Insert the eye concrete screw in the installation tool and screw in place.



4. The installation is finished.